

| A:PARTS | | ASSEMBLY DIAGRAM |
|---------|--|------------------|
| A PARTS | A PARTS ASSEMBLY FOR PULL STARTER ENGING | |
| RS01 | STRING SEAT | |
| RS02 | HANDLE | |
| RS03 | BUFFER HEAD WASHER | |
| RS04 | BUFFER HEAD WASHER SEAT | |
| RS07 | STARTING STRING | |
| RS08 | REAR COVER | |
| RS10 | THREAD SEAT | |
| RS11 | EDDY SPRING | |
| S002 | REAR COVER WASHER (M2.6X6) | |

| B:PARTS | | ASSEMBLY DIAGRAM |
|----------|------------------------------------|------------------|
| B 12 | B PARTS ASSEMBLY FOR 12/15S ENGING | |
| RS12/13 | ONE WAY BEARING SEAT | |
| RS14B | CONNECTIVE SEAT | |
| RS17A | STARTING AXLE | |
| RS18A | STARTING PIN | |
| RS19A | PRESSURE SPRING | |
| RS18/19A | STARTING PIN & SPRING | |
| S002 | REAR COVER SCREW (M2.6X6) 4PCS | |

