

R/C RACING BOAT


电动遥控竞速艇




艇长:680mm 艇宽:215mm 艇高:135mm
Length: 680mm Width: 215mm Height:135mm

套件内容: 快艇本体 (已组装完毕) 7.2V镍镉充电电池 专用充电器
Content of the kit: Main body of racing boat (assembled), 7.2V nickel cadmium rechargeable battery, Dedicated charger


1. 船舱盖及电池的安装 1. Installation Of Battery And Cabin Cover

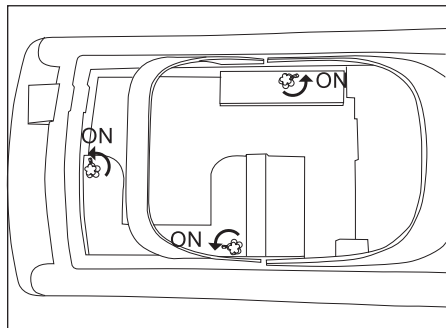


1. 将旋钮按箭头所标示的方向旋转, 松开船舱盖。
1. Turn the knobs in show, and nulock boat cover.

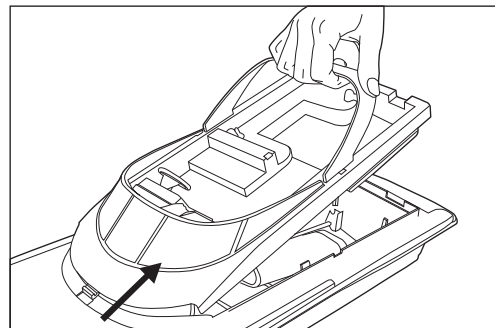


2. 如图所示, 取出船舱盖。
2. Take out the cover board of boat in shown.

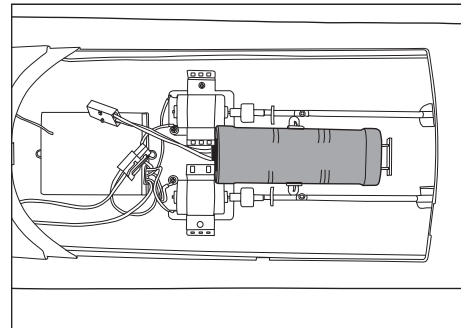


3. 将镍镉电池放在船体后部的定位内, 并确认其不会晃动。
3. Please put nickel cadmium battery into the back the boat and make sure it does not shake.

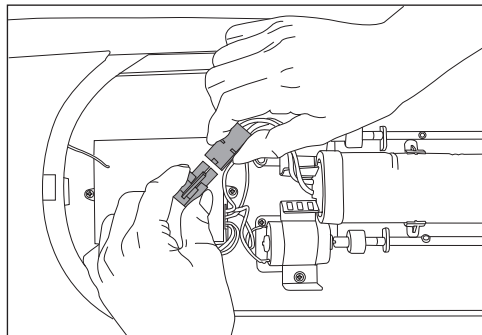

4. 电池与接收机上的插口连接好。
4. Please connect battery with the socket part of receiver.

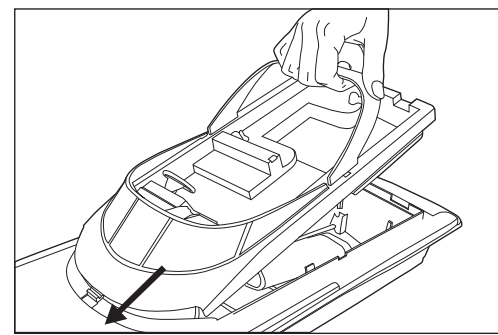


5. 盖上船舱盖板, 前部插销插入船体。
5. Please close the cover board of boat, with its front bolt inserting into boat body.

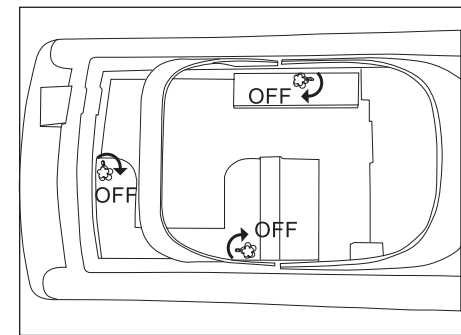


6. 将旋钮按箭头所标示的方向旋紧, 锁好船舱盖。
6. Turn the knobs in show, and finally lock boat cover.

2. 开关 2. Switch

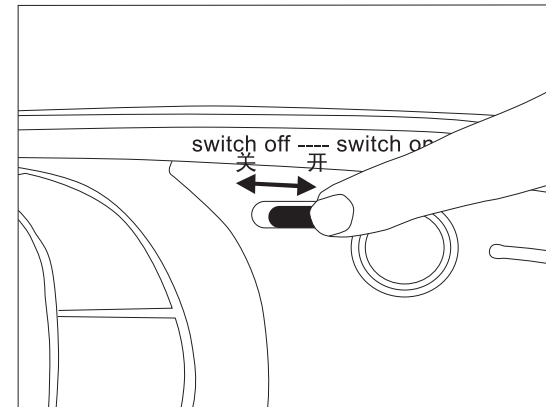




1. 将开关推至打开位置后打开遥控器电源, 手不要放在螺旋桨附近, 并确认螺旋桨周围没有障碍物, 防止高速旋转时伤人。
1. Please push switch to the location of "ON", power on remote controller. Please do not put your hand near screw propeller. Please make sure there is no obstructer near screw propeller so as to prevent injury caused by fast spinning of screw propeller.

3. 充电 3. Charging

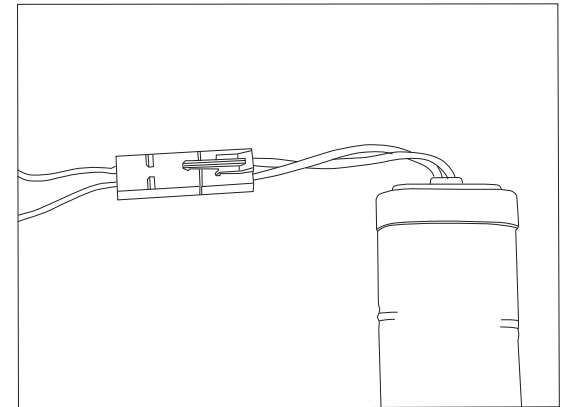

1. 电池充电时请使用本套材内的专用充电器, 充电时使用220V电源, 充电时间5小时。注意: 请小心维护电池, 充电前尽量将电池电量放空, 按标准充电时间为电池充电, 以延长使用寿命, 避免不当使用造成的损坏。
1. Please use the dedicated charger of this kit for battery charging. Charging voltage is 220V and charging time is five hours. Note: Please take good care of battery. Please completely discharge battery before charging. Please charge battery for standard charging time so as to prolong service life of battery and avoid damage of battery caused by improper use.

4. 操作 4. Operation

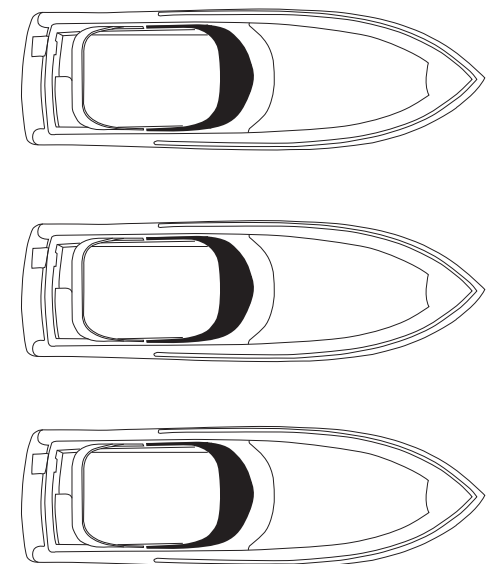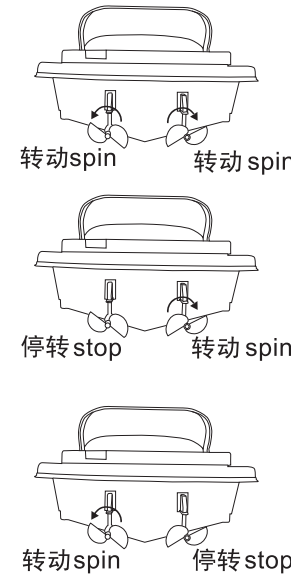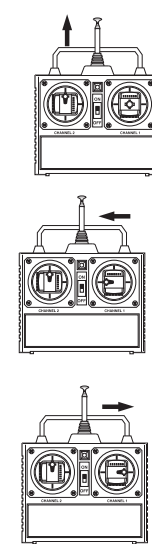

1. 将遥控器左手柄向前推, 两个螺旋桨同时旋转快艇前进。将右手柄向左推, 左桨停, 右桨工作快艇左转。右手柄向右推, 右桨停, 左桨工作快艇右转。
1. Please push left shaft of remote controller forward, the two screw propellers will spin simultaneously and the racing boat will move forward. Please push right shaft leftward, the left screw propeller will stop spinning and right screw propeller working racing boat will turn left. Please push right shaft rightward, the right screw propeller will stop spinning and left screw propeller working racing boat will turn right.
2. 确认发射与接收均正常可靠, 周围无相同频率的遥控器在工作后, 将快艇放入水中。
注意! 1). 14岁以下的使用者必须在成人的指导下操作。
2). 禁止在游泳或有人游泳的水面中航行, 以免伤人。
3). 下水航行前先观察水中有无杂物, 如果杂物过多, 快艇航行时可能会被缠住螺旋桨停航, 建议不要在此类水面操作模型。
2. Please put your boat on water after making sure that transmission and receiving work well and no remote controller of the same working frequency operates nearby.
Note! 1). User under 14 years old shall follow the guidance of adult.
2). Please do not play the racing boat on swimming pool or water with people swimming in so as to avoid injury.
3). Please observe if there is dirt in water before playing. If there is too much dirt, the screw propeller will stop spinning as it is enwound by the dirt. We suggest you not playing the boat on such water.
3. 长时间不使用本模型时, 请把船身内两根铜管均请适量注油, 以备下次使用。
3. If this article is not used for a long time, Please inject oil in the two copper tubes in boat body for future use.
4. 本模型产品遥控半径80米, 请注意不要超出遥控范围, 发生失控现象。
4. The remote control radius of this article is 80 meters. Please make sure the boat does not go out of remote control range.
5. 模型表面避免阳光长时间暴晒及沾染油污, 以免损坏漆面。使用后可用中性洗洁精加清水冲洗。
5. Please keep this article away from sun light and oil pollution. Please clean it by water with moderate abluent.