
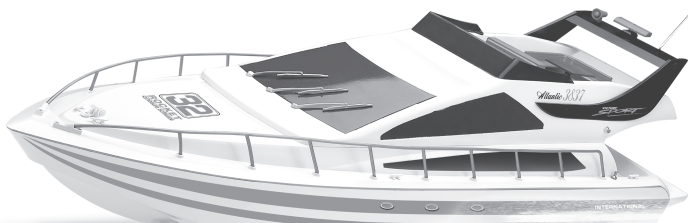


请在使用前详细阅读本使用说明书，请保管好本说明书以备不时之用。
说明书内容可能与实物不同，请以实物为准。

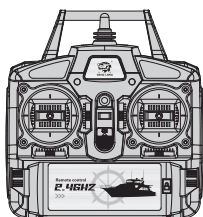

(产品仅适合14岁以上儿童使用)
(Not suitable for children under 14 years old)

产品尺寸(Product size):

长度(Length): 700mm
宽度(Width): 200mm
高度(Height): 245mm

套件内容:

快艇本体 (已组装完毕), 8.4V充电电池, 充电器
Content of the kit: Main body of racing boat (assembled), 8.4V rechargeable battery, Charger

1. 充电 (Battery charging)

- 先将充电器插头插入电源插座(如1), 电源指示灯绿灯亮起, 再将充电器充电接口与电池插头连接(如2), 此时电源指示灯由绿灯变为红灯, 当电池充满时, 电源指示灯变为绿灯。充电时间大约为5小时。
- 充电完毕, 把充电器插头拔出。


1. Firstly, connect the charger with power source(for 1), the indicator light shows green, then connect the battery(for 2), the indicator light turns red. The light will turn green when it is completely charged. Charging time is about 5 hours.

2. Please pull out the charger after it is completely charged.

⚠ 注意 Caution:


- 充电器的额定输入电压必须与当地的家用电压相符;
- 充电时, 充电器和电池会微热属正常。
- 在插入或拔出充电器时, 要注意手指不能接触到充电器的端子。

- The rated input voltage battery charger with the home must be in line voltage.
- When charging, it is normal that the transformer and the battery may get mild heat.
- During the insertion or removal of transformer, please pay attention that the finger should not be contacted to the end of the transformer.

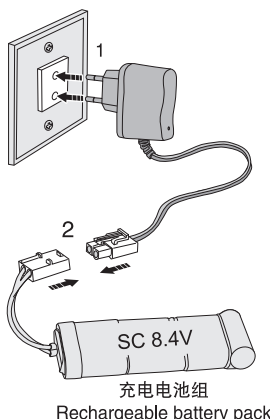


充电电池组
Rechargeable battery pack


2. 船舱盖及电池的安装 Installation of battery and cabin cover

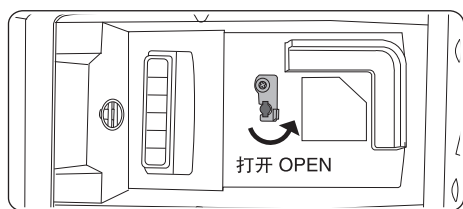


- 将旋钮按箭头所标示的方向旋转, 松开船舱盖。
Turn the knobs in show, and unlock boat cover.

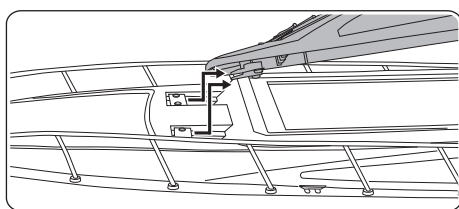


- 如图所示, 取出船舱盖。
Take out the cover board of boat in shown.

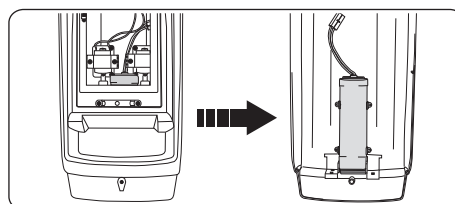


- 将电池放在船体后部的定位内, 并确认其不会晃动。
Please put battery into the back the boat and make sure it does not shake.

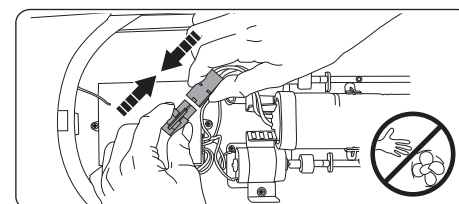

- 电池与接收机上的插口按正确极性连接好, 然后打开电源开关。
Please connect battery with the socket part of receiver, then turn on the power switch.

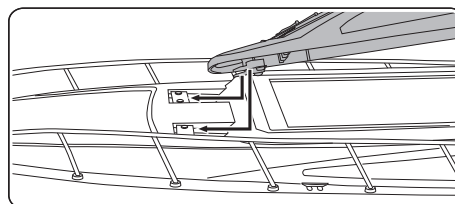


- 盖上船舱盖板, 前部插销插入船体卡板。
Please close the cover board of boat, with its front bolt inserting into boat body.

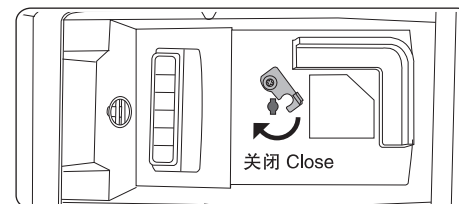

- 将旋钮按箭头所标示的方向旋紧, 锁好船舱盖。
Turn the knobs in show, and finally lock boat cover.


3. 遥控器电池的安装 Assembly of the transmitter battery

- 按下电池盖的PUSH, 把它拆下。
Press down the PUSH on the battery cover and remove it at the same time.

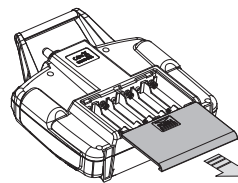


- 按正确极性装好电池。
Load in the battery correctly.

6粒1.5V AA电池
6 x 1.5VAA batteries

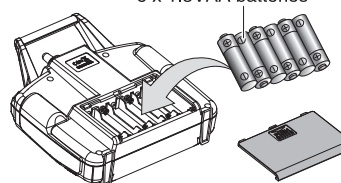




- 关上电池盖
Replace the cover.

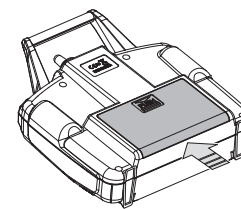

4. 2.4G对码方法 Frequency connecting

首次使用该快艇时, 如果未有对频确认频率, 须先进行频率配对, 步骤如下:

- 打开遥控器电源, 电源指示灯亮, 将左边油门杆往下拉住;
 - 接收器通电, 此时接收器指示灯快速闪烁为进入对码状态, 大约2秒钟, 对码成功后指示灯长亮, 可以正常操作。
- Frequency connecting before playing:
- Turn on controller, the indication light of the controller is on, pull the acceleration lever to the lowest.
 - Turn on the boat power switch, the indication light of the boat is flashing quickly, about 2 seconds, the light will stop flashing that frequency connecting is finished.

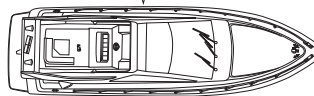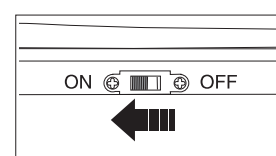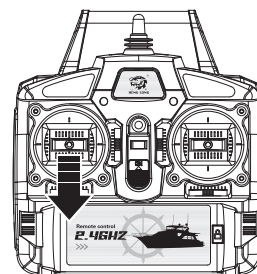

⚠ 注意 Caution:

如果接收器指示灯慢速闪烁为无收到信号或对码不成功, 这时接收器需重新通电再次对频一次。

If the indication light of the boat is flashing slowly, it means the connecting fail, you need to turn off power of the boat and redo frequency connecting as above.