

BRUSHLESS ESC

Instruction Manual

SPECIFICATION

Description	Current		Battery cells		Weight (g)	BEC Output	Size (mm) W x L x H	User Program
	Continuous	Burst	NiMH	LiPo				
EnErG Pro 6 BEC	6A	8A	5-10	2-3	5	5V / 1A	13 x 21 x 4	Yes
EnErG Pro 8 BEC	8A	10A	5-12	2-4	8	5V / 1A	21 x 22 x 4	Yes
EnErG Pro 10 BEC	10A	12A	5-12	2-4	8	5V / 1A	21 x 22 x 4	Yes
EnErG Pro 12 BEC	12A	16A	5-12	2-4	8	5V / 1A	21 x 22 x 4	Yes
EnErG Pro 20 BEC	20A	30A	5-12	2-4	18	5V / 2A	23 x 33 x 6	Yes
EnErG Pro 25 BEC	25A	35A	5-12	2-4	20	5V / 2A	23 x 33 x 6	Yes
EnErG Pro 30 BEC	30A	40A	5-12	2-4	28	5V / 3A	23 x 43 x 6	Yes
EnErG Pro 35 BEC	35A	45A	5-12	2-4	30	5V / 3A	23 x 43 x 6	Yes
EnErG Pro 40 SBEC	40A	60A	5-18	2-6	32	5.5V / 4A	23 x 52 x 7	Yes
EnErG Pro 50 SBEC	50A	70A	5-18	2-6	32	5.5V / 4A	23 x 52 x 7	Yes
EnErG Pro 60 SBEC	60A	80A	5-18	2-6	44	5.5V / 4A	23 x 52 x 14	Yes
EnErG Pro 70 SBEC	70A	90A	5-18	2-6	48	5.5V / 4A	23 x 52 x 14	Yes
EnErG Pro 85 SBEC	85A	100A	5-18	2-6	60	5.5V / 4A	34 x 52 x 14	Yes
EnErG Pro 110 SBEC LV	110A	120A	5-18	2-6	86	5.5V / 4A	34 x 52 x 14	Yes
EnErG Pro 100 OPTO HV	100A	120A	18-38	6-12	76		34 x 52 x 20	Yes

FEATURES

- ▶ Extremely low internal resistance
- ▶ Super smooth and accurate linear throttle
- ▶ Over-heat protection feature
- ▶ Auto throttle shut down at loss of signal
- ▶ Supports high RPM motors
- ▶ Power arming protection (prevents the motor from running when accidentally switched ON)
- ▶ Advanced programming software

Contents

Warranty conditions	2
EU regulations.....	2
Connection.....	3
User programmable Settings.....	4
1. Brake: ON/OFF.....	4
2. Battery type: LiPo or NiCad/NiMh.....	4
3. Low Voltage Protection Threshold.....	4
4. Restore factory setup defaults:.....	4
5. Timing setup : Automatic / Low / High.	5
6. Soft Acceleration Start ups.....	5
7. Heli Governor mode.....	5
8. Motor Rotation: Reverse.....	5
9. Switching Frequency : 8kHz/16kHz	5
10. Low Voltage Cutoff Type	5
Programming Mode Audible Tones.....	6
Powering up the ESC for the first time	7
Setting the Automatic Calibration	7
Normal ESC start up procedure	7
Entering the Programming Mode	7
Built in safety features	8
Alert tones	8
Built-in Intelligent ESC Safety Functions	8
General Safety Precautions.....	8
Trouble Shooting.....	9

WARNING!

Model aircraft flying is a potentially hazardous sport which has the potential to endanger life, cause injury or damage property.

When you see this symbol in this manual, your attention is being drawn to a potential hazard and you should take particular note.

WARRANTY CONDITIONS

For a period of one year from time of purchase, J. Perkins Distribution Ltd will repair or replace, at it's discretion, any items showing manufacturing or assembly defects that has been found faulty by our service department. This does not affect your statutory rights.

J Perkins Distribution Ltd does not accept any liability for any injury, damage or consequential damage arising as a result of failure to observe the procedures and precautions outlined in this manual. J Perkins Distribution Ltd does not accept any liability that may arise from any misuse or modification of this equipment, Please note that, whilst every effort is made to ensure the accuracy of instructions and materials included with this product, mistakes can occur and neither J. Perkins Distribution Ltd nor it's distributors will be held liable for any loss or damage arising from the use of this system or for any loss or damage arising from omissions or inaccuracies in the associated instructions, references, web sites or materials included or referred to with this product.

We reserve the right to modify the design of this product, the box contents and manual without prior notification. E&OE
© 2009 J Perkins Distribution Ltd. All rights reserved.
web: www.jperkinsdistribution.co.uk

EU REGULATIONS

J Perkins Distribution Ltd declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2204/108 EC on Electromagnetic Compatibility. A copy of the declaration(s) of conformity can be obtained from J Perkins Distribution Ltd, Ashford rd, Lenham, Kent. UK ME17 2DL. This system complies with the EU directive on Waste Electrical and Electronic Equipment. Do not dispose of this product in household waste. At the end of the products' life, dispose of it at a designated collection point for the recycling of waste electrical and electronic equipment.
Please contact your supplier for any advice required on disposal.



JP·EnErG Pro

Thank you for purchasing the JP EnErG Pro Brushless Electronic Speed Controller (ESC).

High power systems for RC model can be very dangerous and we strongly suggest that you read this manual carefully and entirely before using the product.

The JP EnErG Pro ESC's high power BEC has been specifically designed for extreme aerobatics and therefore has the capability to support the higher momentary peak demand loads to eliminate the possibility of unwanted shutdowns. It is also capable of supporting continuous simultaneous multiple servo operations typically found in CCPM equipped hardcore 3D electric helicopters.


CONNECTION

The speed controller can be connected to the motor by soldering directly or with high quality connectors. Always use new connectors, which should be soldered carefully to the cables and insulated with heat shrink tube. The maximum length of the battery pack wires should be within 6 inches.

- ▶ 1. Solder controller to the motor wires.
- ▶ 2. Solder appropriate connectors to the battery wires.
- ▶ 3. Insulate all solder connectors with heat shrink tubes.
- ▶ 4. Plug the connector into the receiver throttle channel.
- ▶ 5. Ensure the correct polarity is observed. The ESC Red and Black wires connect to the battery pack Red and Black wires respectively.

WARNING!

⚠ Improper polarity or short circuit will damage the ESC. It is your responsibility to double check all plugs for proper polarity and firm fit BEFORE connecting the battery pack.

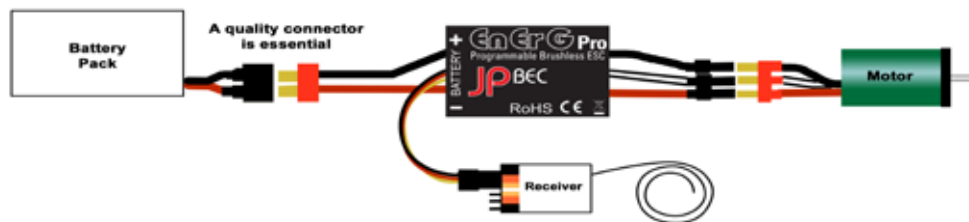

USER PROGRAMMABLE SETTINGS

Our ESC allows you to program all functions to fit your specific needs, which makes it very efficient and user friendly:

- ▶ 1. Brake setting (we recommend using brake for only folding props applications)
- ▶ 2. Battery type (LiPo or NiCd/NiMh)
- ▶ 3. Low voltage cutoff setting
- ▶ 4. Factory default setup restore
- ▶ 5. Timing settings (to enhance ESC efficiency and smoothness)
- ▶ 6. Soft acceleration start ups (for delicate gearbox and helicopter applications)
- ▶ 7. Governor mode (for helicopter applications)
- ▶ 8. Motor rotation (clockwise\counterclockwise)
- ▶ 9. Switching frequency
- ▶ 10. Low voltage cutoff type (power reduction or immediate shutdown)

1. BRAKE: ON/OFF


ON - Sets the propeller to the brake position when the throttle stick is at the minimum position (Recommended for folding props).

OFF - Sets the propeller to freewheel when the throttle stick is at the minimum position.

2. BATTERY TYPE: LIPO OR NICAD/NIMH

NiCad/NiMh - Sets Low Voltage protection threshold for NiCad/NiMh cells.

LiPo - Sets Low voltage protection threshold for LiPo cells and automatically detects the number of cells within the pack.

 **Note: Selecting the NiCad/NiMh option for the battery type, triggers the ESC to automatically set the cutoff threshold to the factory default of 65%. The cutoff threshold can then be subsequently altered through the Low Voltage protection function (3), if required. The ESC will read the initial voltage of the NiCad/NiMh pack once it is plugged in and the voltage read will then be used as a reference for the cutoff voltage threshold.**

3. LOW VOLTAGE PROTECTION THRESHOLD (CUTOFF THRESHOLD):

Low / Medium / High

1) For Li-xx packs- number of cells are automatically calculated and requires no user input apart from defining the battery type (2). This ESC provides 3 setting options for the low voltage protection threshold; Low (2.8V)/ Medium (3.0V)/ High (3.2V). For example: the voltage cutoff options for an 11.1V/ 3 cell Li-Po pack would be 8.4V (Low)/ 9.0V(Med)/ 9.6V(High)

2) For Ni-xx packs-low / medium / high cutoff voltages are 50%/65%/65% of the initial voltage of the battery pack. For example: A fully charged 6 cell NiMh pack's voltage is 1.44V x 6=8.64V, when "LOW" cutoff voltage is set, the cutoff voltage is: 8.64V x 50%=4.3V and when "Medium" or "High" is set, the cutoff voltage is: 8.64V X 65%=5.61V.

4. RESTORE FACTORY SETUP DEFAULTS:

Restore- Sets the ESC back to factory default settings;

Brake.....OFF

Battery type Detect.....LiPo with Automatic Cell

Low voltage cutoff thresholdMedium (3.0V/65%)

Timing setup.....Automatic

Soft Acceleration Start UpMedium

Governor mode.....OFF

Frequency.....8kHz


Low voltage cutoff type.....Reduce power

5. TIMING SETUP : AUTOMATIC / LOW / HIGH.

Automatic – ESC automatically determines the optimum motor timing

Low (7-22 deg) – Setting for most 2 pole motors.

High (22-30 deg) - Setting for motors with 6 or more poles.

 **In most cases, automatic timing works well for all types of motors. However for high efficiency we recommend the Low timing setting for 2 pole motors (generally in-runners) and high timing for 6 poles and above (generally out-runners). For higher speed, High timing can be set. Some motors require different timing setups therefore we suggest you to follow the manufacturer recommended setup or use the automatic timing setting if you are unsure.**

 **Note: Run your motor on the ground first after making any changes to your motor timing!**

6. SOFT ACCELERATION START UPS

Very Soft – Provides initial slow 1.5 sec ramp-up from start to full rpm intended to protect delicate gears from stripping under instant load. This setting is recommended for either fixed wing models equipped with gearboxes and/or helicopters.

Soft Acceleration- Provides initial slow 1 sec ramp-up from start to full rpm. This setting is recommended for either fixed wing models equipped with gearboxes and/or helicopters.

Start Acceleration – Provides quick acceleration start ups with a linear throttle response. This is recommended for fixed wing models fitted with direct drive setups.

7. HELI GOVERNOR MODE

RPM control off

First range: Initially there will be a 5 second delay from start to full RPM. After this any further input from the throttle will be as normal.

Second range: Initially there will be a 15 second delay from start to full RPM. After this any further input from the throttle will be as normal.

Note: If you close the throttle at any point and allow the motor to stop then the time delay will become active again.

 **Note: Once the Governor Mode is enabled, the ESC's Brake (1) and Low Voltage Cutoff Type (10) settings will automatically be reset to No Brake and Reduce Power respectively regardless of what settings they were previously set.**

8. MOTOR ROTATION: REVERSE

In most cases motor rotation is usually reversed by swapping two motor wires. However, in cases where the motor cables have been directly soldered to the ESC cables, motor rotation can be reversed by changing the value of this setting on the ESC.

9. SWITCHING FREQUENCY : 8KHZ/16KHZ

8kHz – Sets ESC switching frequency for 2 pole motors, e.g. in-runners.

16kHz – Sets ESC switching frequency for motors with more than 2 poles, e.g. out-runners.

Although 16kHz is more efficient, the setup default is 8kHz due to the higher RF noises caused at 16kHz.

10. LOW VOLTAGE CUTOFF TYPE : REDUCE POWER / HARD CUTOFF

Reduce Power – ESC reduces motor power when the pre-set Low Voltage Protection Threshold value (3) is reached. (recommended).

Hard Cutoff – ESC instantly cuts motor power when the pre-set Low Voltage Protection Threshold value (3) is reached.

PROGRAMMING MODE AUDIBLE TONES

Programming Mode Audible Tones		ESC Functions
Upon power up of the ESC - Throttle calibration (Within the first 4 Sec) ●● ●● ●● ●●		
1	Brake * * * *	Brake On/Off (Loop)
2	Battery type ~ ~ ~ ~ ~~ ~~ ~~ ~~	NiCad LiPo*
3	Low Voltage Cutoff Threshold *	Low 2.8V/50% Medium 3.0V/60%* High 3.2V/65%
4	Restore Factory Setup Defaults _ _ _ _ _	Restore
5	Timing Setup _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	Automatic (7-30°)* Low (7-22°) High (22-30°)
6	Soft Acceleration Start Ups VV VV VV VV V V V V VVV VVV VVV VVV	Very Soft Soft Acceleration* Start Acceleration
7	Governor Mode * * * * ** ** ** ** *** *** *** ***	Rpm off* Heli first range Heli second range
8	Motor Rotation W W W W	Positive/ Reverse
9	Switching Frequency // // // // \\ \\ \\ \\	8kHz* 16kHz
10	Low Voltage Cutoff Type _ _ _ _ _ _ _ _ _ _ _ _	Reduce Power* Hard Cut Off

* Denotes default settings

POWERING UP THE ESC FOR THE FIRST TIME

SETTING THE AUTOMATIC CALIBRATION

The JP EnErG Pro ESC features Automatic Throttle Calibration to attain the smoothest throttle response and resolution throughout the entire throttle range of your transmitter. This step is done once to allow the ESC to “learn and memorize” your Transmitter’s throttle output signals and only repeated if you change your transmitter.

- ▶ 1. Switch your Transmitter ON and set the throttle stick to its maximum position.
- ▶ 2. Connect the battery pack to the ESC. Wait for about 2 seconds, the motor will beep for twice, then put the throttle in the minimum position, the motor will also beep, which indicates that your ESC has got the signal range of the throttle from your transmitter.

The throttle is now calibrated and your ESC is ready for operation.

NORMAL ESC START UP PROCEDURE

- ▶ 1. Switch your Transmitter ON and set the throttle to its minimum position.
- ▶ 2. Connect the battery pack to the ESC.
- ▶ 3. When the ESC is first powered up, it emits two sets of audible tones in succession indicating the status of its programming state.
The first set of tones denotes the number of cells in the LiPo pack connected to the ESC. (Three beeps (***) indicates a 3 cell LiPo pack while 4 beeps (****) indicates a 4 cell LiPo pack) etc.
The second set denotes Brake status (one beep (*) for Brake “ON” and two beeps (**) for Brake “OFF”).

The ESC is now ready for use.

ENTERING THE PROGRAMMING MODE

- ▶ 1. Switch your Transmitter ON and set the throttle to its maximum position.
- ▶ 2. Connect the battery pack to the ESC.
- ▶ 3. Wait until you hear two short beeps (_ _ **) confirming that the ESC has now entered the programming mode.
- ▶ 4. If the throttle stick is lowered to its minimum position within 5 seconds, an audible tone is emitted confirming that the throttle calibration setting has changed.
If the throttle stick is left in the maximum position beyond 5 seconds, the ESC will begin the sequence from one function and its associated setting options to another. (Please refer to the table to cross reference the functions with the audible tones).
- ▶ 5. When the desired tone for the function and setting option is reached, move the throttle stick down to its minimum position. ESC will emit two beeps (**) confirming the new setting has been stored.

The ESC only allows the setting of one function at a time. Therefore should you wish to change another function you must disconnect the battery pack and wait 5 seconds then reconnect the battery and repeat the above steps.

BUILT IN SAFETY FEATURES

ALERT TONES


The EnErG Pro ESC is equipped with audible alert tones to indicate abnormal conditions at power up.

- ▶ 1. If the ESC can't enter into working mode after powering up, it indicates that you have not setup throttle calibration.
- ▶ 2. Continuous beeping tone (****) – Indicates that throttle stick is not in the minimum position.
- ▶ 3. Single beeping tone followed by a one second pause (* * * *)– Indicates that the battery pack voltage is not within the acceptable range. (The ESC automatically checks and verifies the battery voltage once the battery is connected).
- ▶ 4. A single beeping tone followed by a short pause (* * * *) – Indicates that the ESC is unable to detect the normal throttle signal from the receiver.

BUILT-IN INTELLIGENT ESC SAFETY FUNCTIONS

- ▶ 1. Over-heat protection:
When the temperature of ESC exceeds 110°C, the ESC will reduce the output power to allow it too cool.
- ▶ 2. Lost Throttle signal protection:
The ESC will automatically reduce output power to the motor when it detects a lost of throttle signal for 2 seconds, a subsequent loss of throttle signal beyond 2 seconds, will cause the ESC to automatically cut power to the motor.

GENERAL SAFETY PRECAUTIONS

 **Do not install the propeller (fixed wing) or drive pinion (helicopter) on the motor when you test the ESC and motor for the first time to verify the correct settings on your radio. Only install your propeller or pinion after you have confirmed that the settings on your radio are correct.**

- ▶ Never use damaged battery cells.
- ▶ Never use battery packs that are known to overheat.
- ▶ Never short circuit battery or motor terminals.
- ▶ Always use proper insulation material for cable insulation.
- ▶ Always use proper cable connectors.
- ▶ Do not exceed the number of cells or servos specified by the ESC.

WARNING!

Wrong battery polarity will damage the ESC and void the warranty.

- ▶ Install the ESC in a suitable location with adequate ventilation for cooling. This ESC has a built-in over heat protection feature that will reduce power to the motor once the ESC temperature exceeds the 230°F/ 110°C high temperature limit.
- ▶ Use only batteries that are supported by the ESC and ensure correct polarity is observed before connecting.
- ▶ Switch your Transmitter ON and ensure the throttle stick is in the minimum position before connecting the battery pack.
- ▶ Never switch your transmitter OFF while the battery is connected to your ESC.
- ▶ Only connect your battery pack just before flying and do not leave your battery pack connected after flying.
- ▶ Handle your model with extreme care once the battery pack is connected and keep away from the propeller at all times. Never stand in-line or directly in front of any rotating parts.
- ▶ Do not immerse the ESC underwater or allow it to get wet.
- ▶ Always fly at a designated flying site and abide by the rules and guidelines set by your flying club.

TROUBLE SHOOTING

Problem	Possible Cause	Solution
Motor doesn't work, but there are audible tones signalling the number of cells after powering up ESC.	The ESC throttle calibration has not set up.	Set up the ESC throttle calibration.
Motor doesn't work and no audible tone is emitted after connecting the battery. Servos are not working either.	Poor/loose connection between battery pack and ESC.	Clean connector terminals or replace connector.
	No power	Replace with a freshly charged battery pack
	Poor soldered connections (dry joints)	Re-solder the cable connections
	Wrong battery cable polarity	Check and verify cable polarity
	ESC throttle cable connected to receiver in the reverse polarity	Check the ESC cable connected to the ESC to ensure the connectors are in the correct polarity.
	Faulty ESC	Replace ESC
Motor doesn't work and no audible tone emitted after connecting the battery BUT servos are working. OR Motor doesn't work after powering up the ESC. An alert tone with two beeping tones followed by a short pause (** ** ** **) is emitted.	Poor / loose connection between ESC and motor	Clean connector terminals or replace connectors
	Burnt motor coils	Replace motor
	Poor soldered connections (dry joints)	Re-solder the cable connections
	The battery pack voltage is not within the acceptable range.	Check battery pack voltage and if necessary replace with a freshly charged battery pack
Motor doesn't work after powering up the ESC. An alert tone with a single beeping tone followed by a short pause (** ** *) is emitted.	The ESC is unable to detect the normal throttle signal from the receiver	Check and verify that the ESC cable is connected to the <u>Throttle</u> channel on the receiver. Check the transmitter and receiver to verify that there is throttle signal output. (Connect a spare servo to verify throttle channel operation)
Motor doesn't work after powering up the ESC. An alert tone with continuous beeping tones (****) is emitted.	The throttle stick is not in the <u>minimum</u> position at power up.	Move the throttle stick to the minimum position.
Motor doesn't work after powering up the ESC. ESC emits two long audible tones followed by two short beeps(_ _ * *)	Reversed throttle channel caused the ESC to enter the programming mode.	Enter the servo reverse menu on your transmitter and reverse the throttle channel. Note: For Futaba radios set the throttle channel to Reverse.

Problem	Possible Cause	Solution
Motor runs in reverse rotation.	Wrong cable polarity between the ESC and the motor.	Swap any two of the three cable connections between the ESC and the Motor or access the Motor Rotation function via the ESC programming mode and change the pre-set parameters.
Motor stops running in flight.	Lost throttle signal	Check proper operation of the radio equipment. Check the placement of the ESC and the Receiver and check the route of the receiver's aerial and ESC cables to ensure there is adequate separation to prevent RF interference . Install a ferrite ring on the ESC's throttle cable.
	Battery Pack voltage has reached the Low Voltage Protection threshold.	Land the model immediately and replace the battery pack.
	Possible bad cable connection	Check and verify the integrity of the cable connections
Motor restarts abnormally ESC Overheats	Possible RF Interference at the flying field.	The normal operation of the ESC may be susceptible to surrounding RF interference. Restart the ESC to resume normal operation on the ground to verify recurrence. If the problem persists, test the operation of the ESC at a different flying field.
	Inadequate Ventilation	Relocate the ESC to allow better ventilation
	Servos drawing too much current and over loading the ESC.	Use servos that are adequately sized for the ESC. The maximum BEC current drawn should be within the BEC limits.
	Over sized motor or prop	Reduce prop size or resize the motor

JP·ENERG Pro
BRUSHLESS ESC

J Perkins Distribution, Lenham, UK



www.jperkinsdistribution.co.uk