

WHITE */ WESTERN STAR

READ THIS BEFORE YOU BEGIN


will familiarize you with the location of the parts.


For the best results, the various sub-assemblies and components should be painted before any "CHROME" parts are attached. For example: When attaching "NON-CHROME" engine parts, it is best to cement them in place and paint as a unit, "CHROME" PARTS ARE INDICATED BY (C).


AMT kits are molded from the finest high-impact styrene plastic. Use only


Look over this Instruction Sheet carefully before you begin building. Following the assembly instructions and "TEST-FIT" the parts without cementing. This joining. When attaching "CHROME" or painted parts, scrape plating or paint away where parts are to be joined. Cement all parts unless otherwise indicated by the instructions. Use just enough cement to join parts and be careful not to smear cement on exposed surfaces.


Built according to the instructions on this sheet, you should have no trouble assembling your kit. Just follow the numbers as the instructions are numbered in order of assembly.

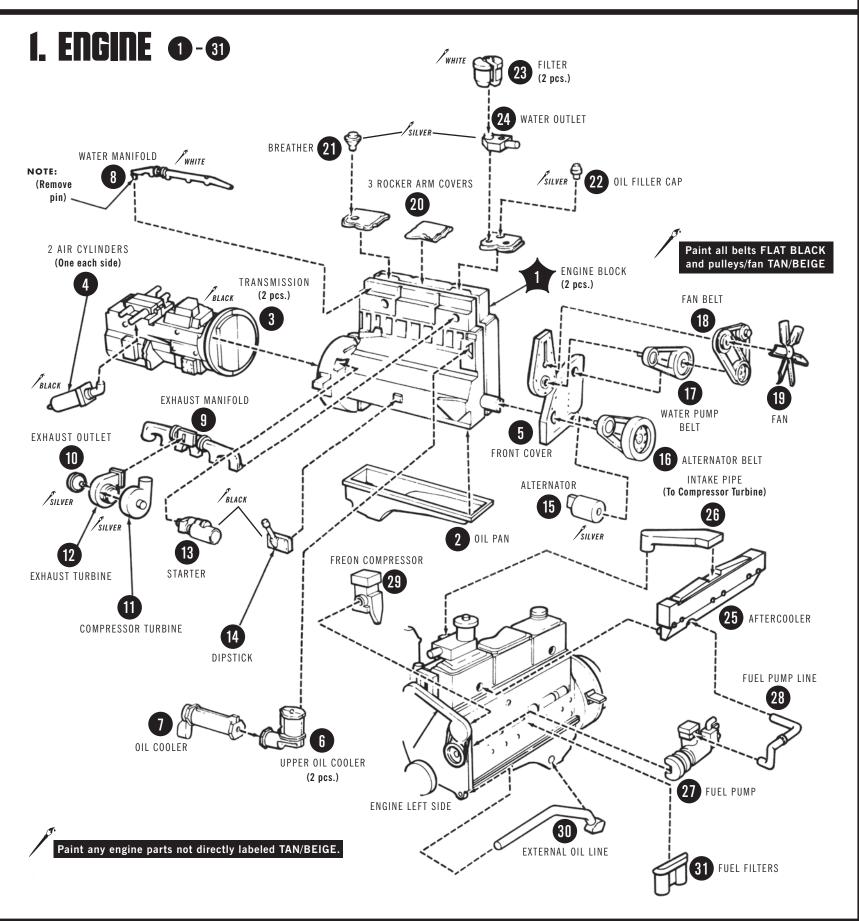


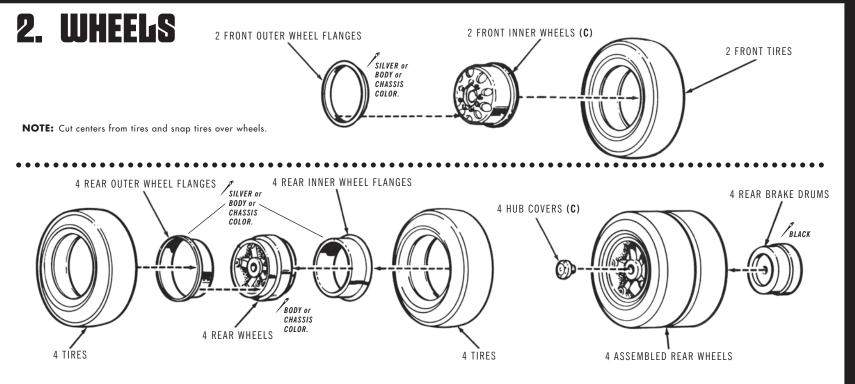


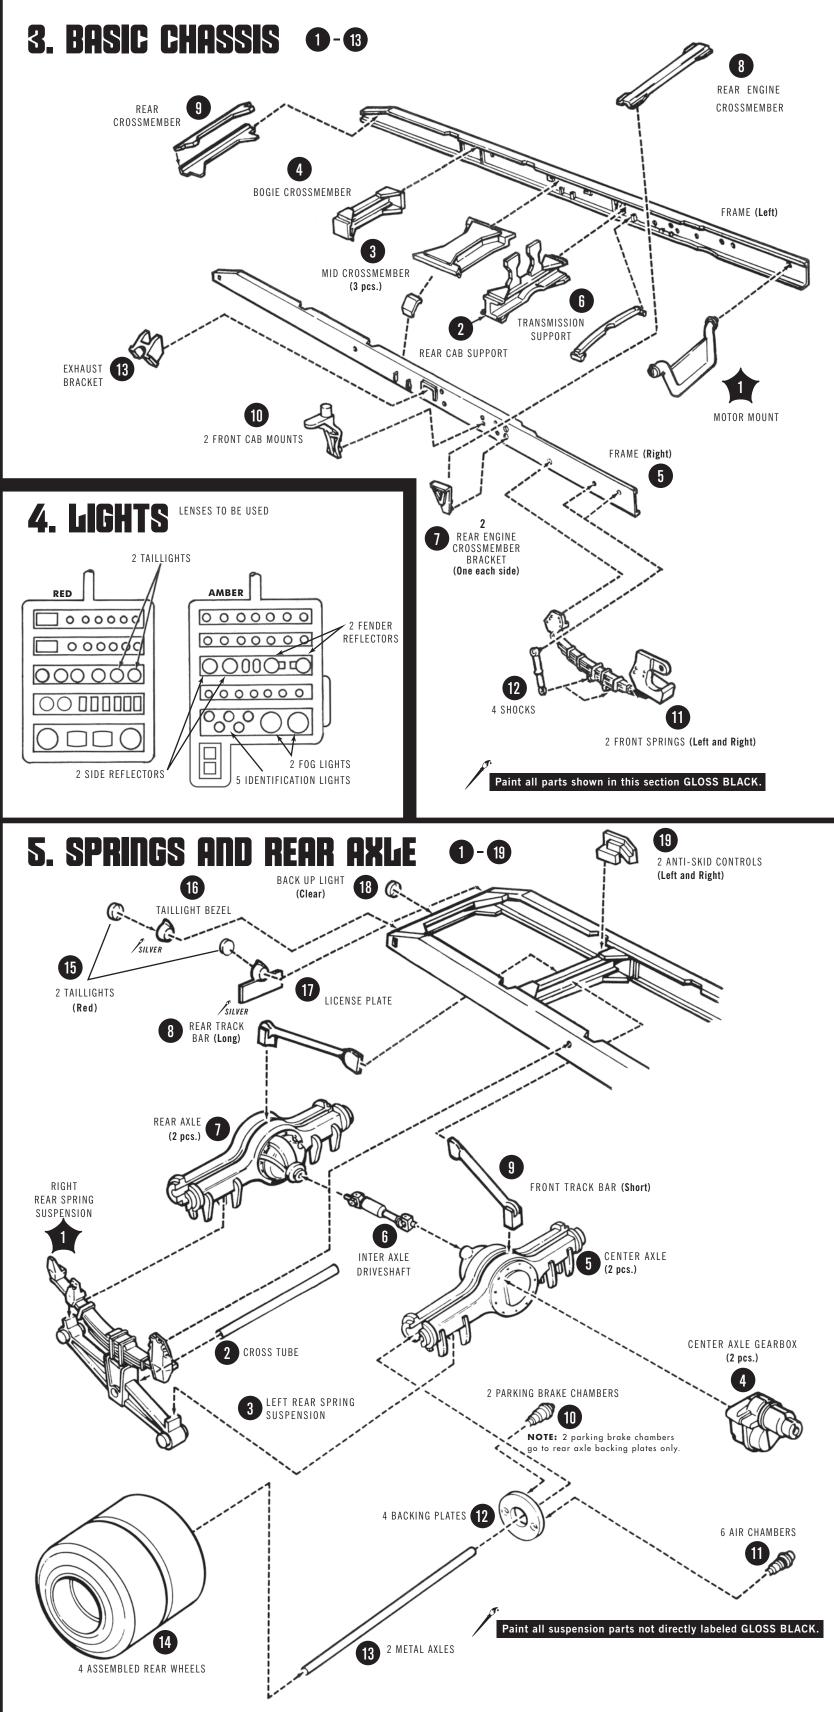


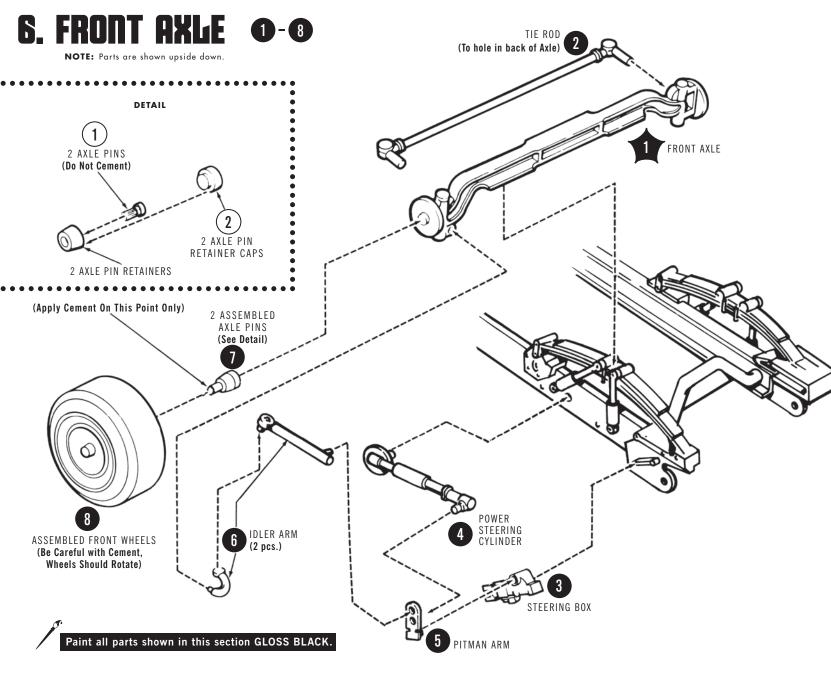


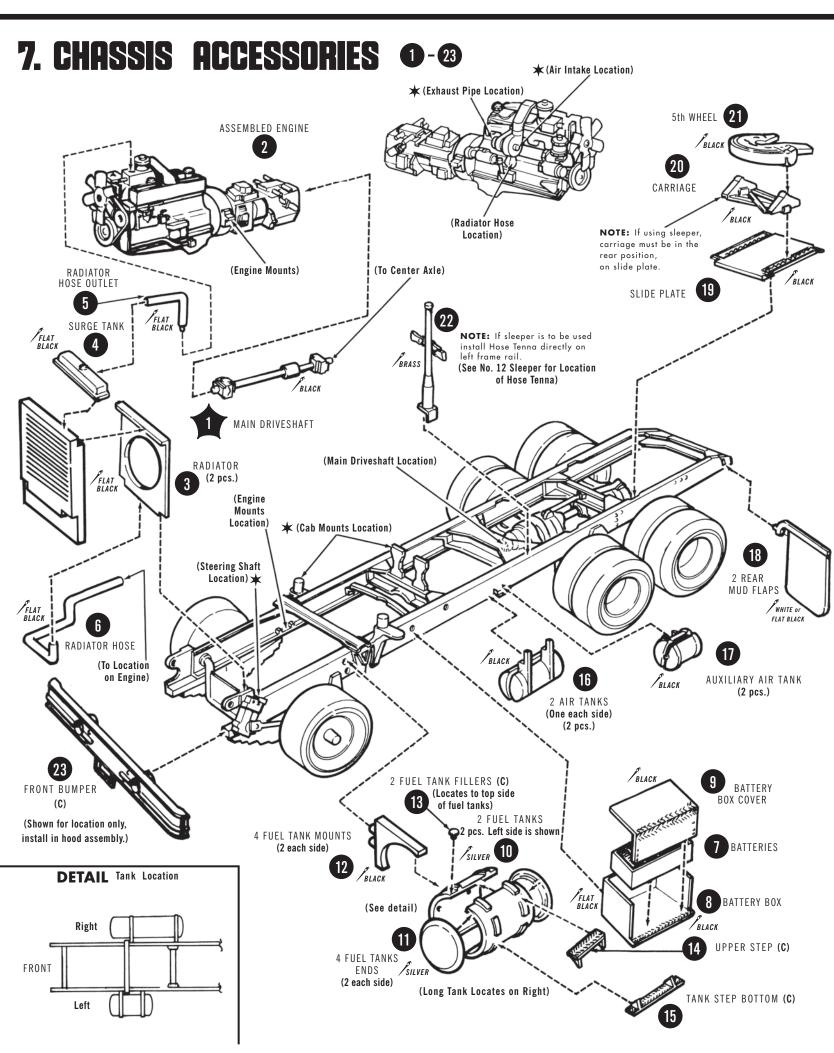


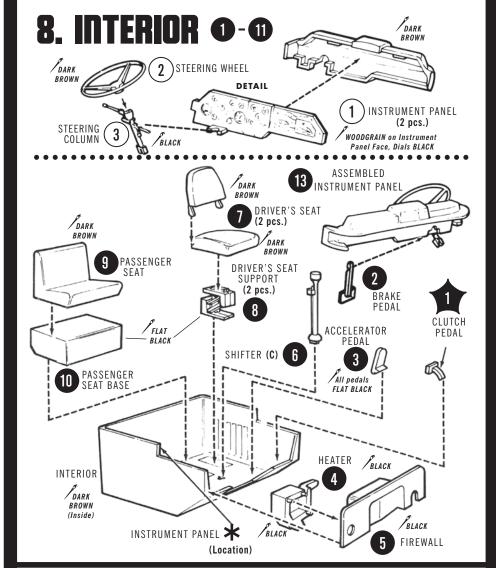


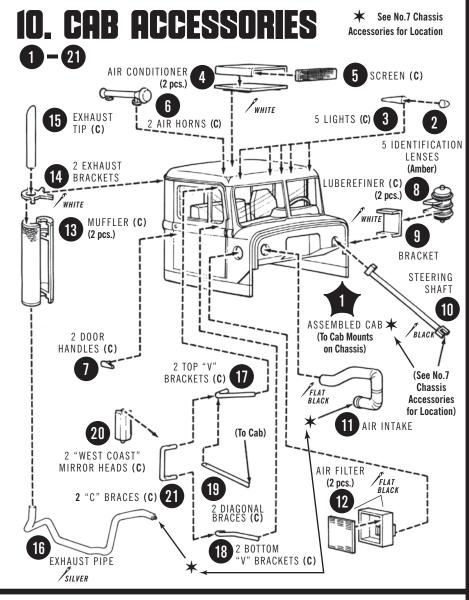

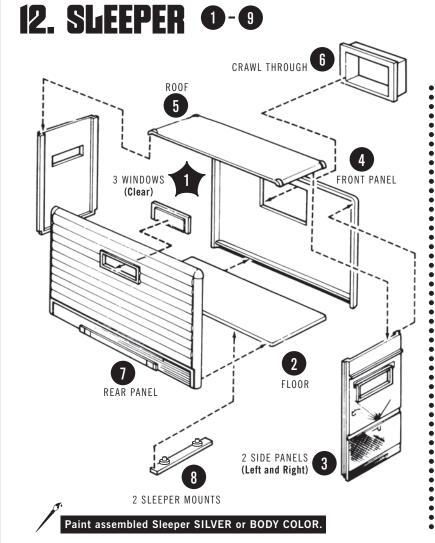

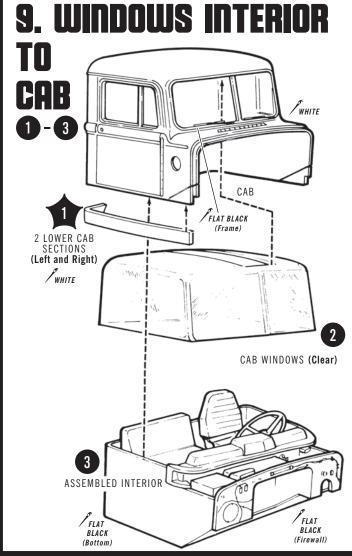

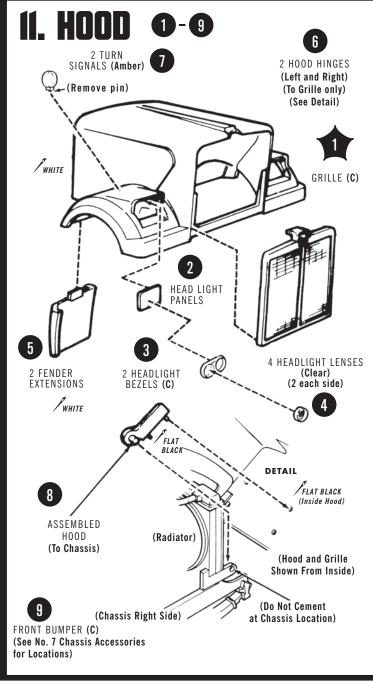

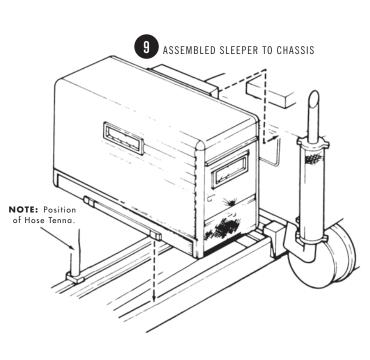

White used under license from Volvo Group North America, LLC, successor-in-interest to Volvo Group North America, Inc., Greensboro, NC. AMT is a registered trademark of Round 2, LLC. ©2012 Round 2, LLC, South Bend, IN 46628 USA. Product and packaging designed in the USA. Made in China. All rights reserved.