Please read through this manual before use.


HENG LONG Since 1986


1/16 SCALE 2.4GHz REAL RADIO CONTROL BATTLE TANK

IN T-72 MBT

坦克装甲安装方法 Tank Armor install method

NO.3939-1

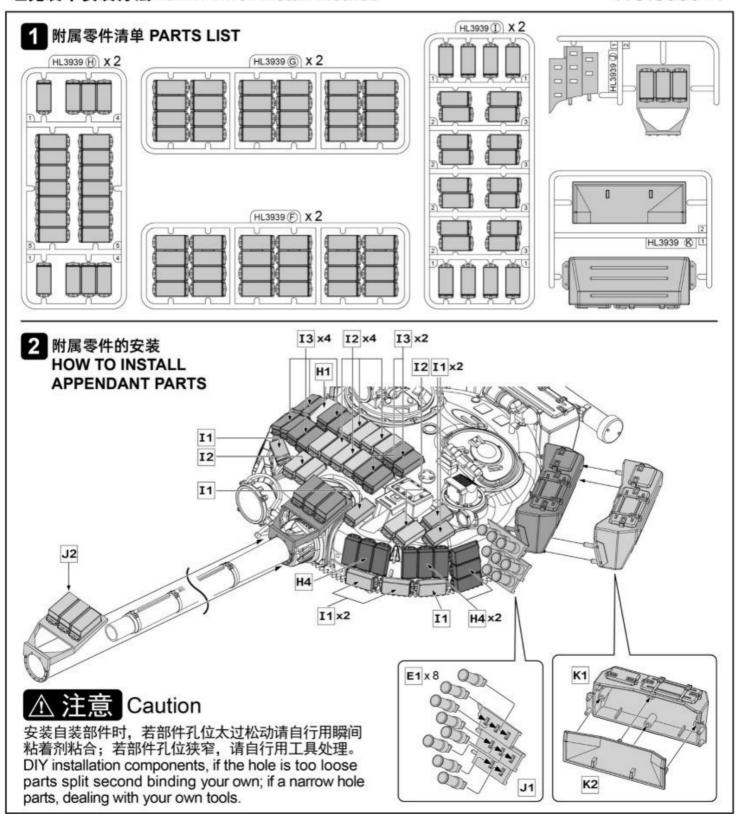


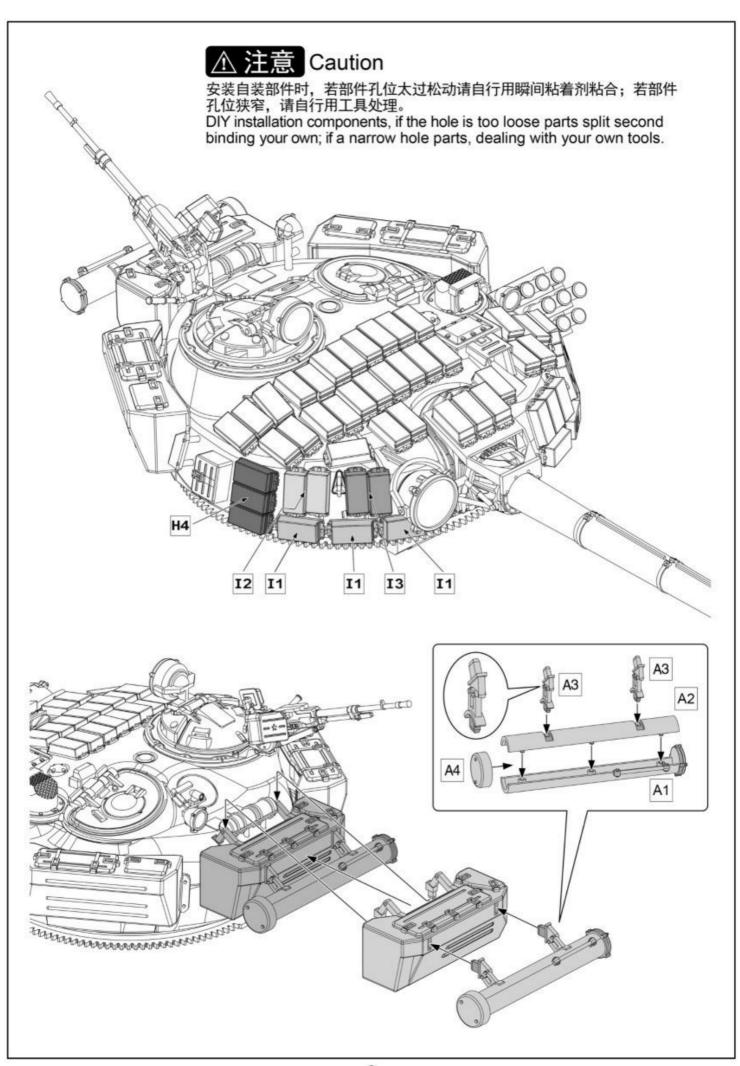


⚠ 注意 Caution

安装自装部件时,若部件孔位太过松动请自行用瞬间粘着剂粘合;若部件孔位狭窄,请自行用工具处理。

DIY installation components, if the hole is too loose parts split second binding your own; if a narrow hole parts, dealing with your own tools.

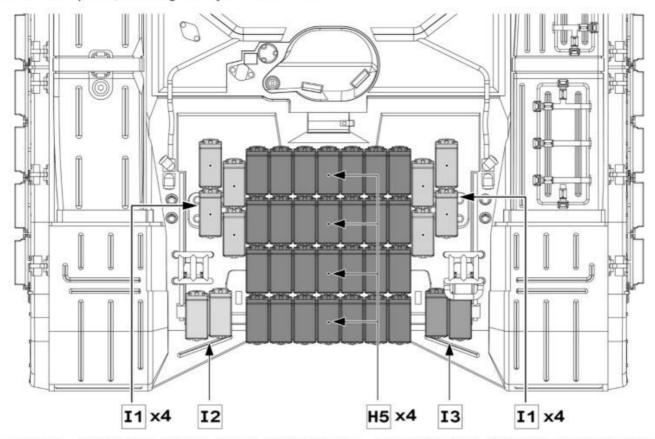

- 1. 如下图所示,先将装甲片 F 被方框 " 图住的胶片除去,然后再按正确方向将装甲片 F 安装到车壳侧面相 应的孔位上。
- 2. 如下图所示,先将装甲片 G 按照图示被圆圈 "○"圈住的胶柱剪平,然后再按正确方向将装甲片 G 安装到车 壳侧面相应的孔位上。
- 2. As the shown below, First cut the plastic column flat from the Armor G which encircle by the circle "O" in the figure. Then install it to the corresponding hole on the side of the shell according to the correct direction.

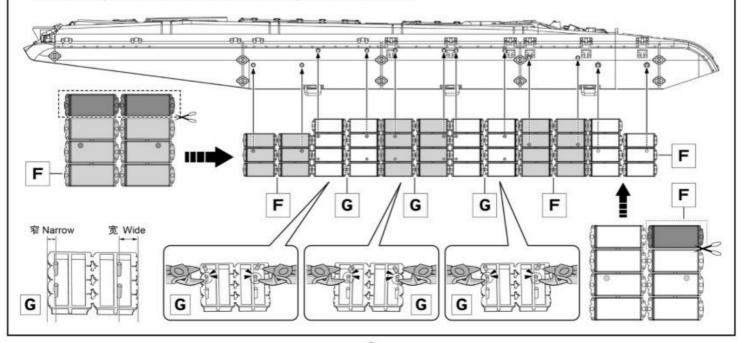

⚠注意 Caution

安装自装部件时,若部件孔位太过松动请自行用瞬间粘着剂粘合;若部件孔位狭窄,请自行用工具处理。

DIY installation components, if the hole is too loose parts split second binding your own; if a narrow hole parts, dealing with your own tools.

